



Tablet

Tablet 7" 3G

Jet 703

PMID703GK



**Tablet 3G
User Guide**

1. Tablet Layout	4
1.1 Power Key	
1.2 Menu Key	
1.3 Home Key	
1.4 Back Key	
1.5 Side Key	
2. Installation method an precaution of SIM	5
2.1 Installation method and precautions of SIM card	
2.2 Insert SIM card	
2.3 SIM card code	
2.4 Connecting to network	
2.5 Precautions of SIM card	
2.6 Métodos de operación e instalación de la tarjeta SD	
3. Battery and charging methods	6
4. Unlocking mode	6
5. Tablet options list	7
5.1 Unlocking interface	
5.2 Main menu	
5.3 Main menu page	
5.4 View notifications	
5.5 Notifications intarface of status bar	
5.6 Quick settings intarface of status bar	
5.7 Manage applications	
5.8 Contacts	
5.9 Smart dialing	
6. Messaging & browser	10
6.1 Messaging interface	
6.2 Browser	

7. Music	11
7.1 Music interface	
8. Camera	11
8.1 Camera function	
8.2 Dual camera	
9. Video recorder	12
10. Sound recorder	12
11. Gallery	13
12. E-mail	13
13. File manager	14
14. Software store	14
15. Settings	
15.1 Security function	
15.2 Backup and reset	
	14
16. Drop-up menu bar	15
17. Troubleshooting	16
18. Warranty	19

1. Tablet Layout

1.1. Power Key:

Press and hold this key to turn on/off the mobile phone; in standby state, press this key to turn on/off the screen.

1.2. Menu Key:



Press this key to open the action list, so that you can execute the action in current interface or menu.

1.3. Home Key:



Press this key to return to the home page from any application or interface.

 
1.4. Back Key:



Press this key to return to previous interface, or close the dialog box, menu, notification panel or the screen keypad.

1.5 Side Key:

Presione este botón para ajustar el volumen.

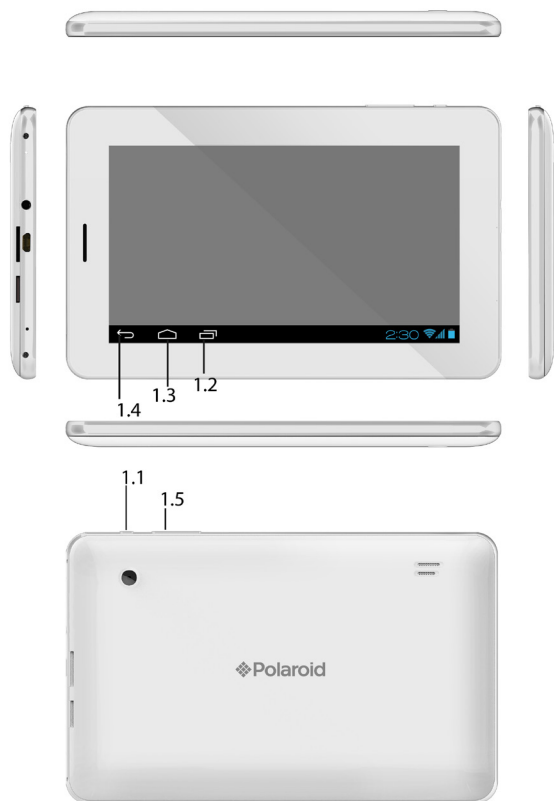


2. INSTALLATION METHOD AND PRECAUTIONS OF SIM CARD

2.1. Método de Instalación y cuidados de la tarjeta SIM:

By setting PIN (personal identification number) code of the SIM card, you can protect your SIM card from illegal operation.

2.2. Installing SIM card:

 Please turn off the mobile phone first, take out the battery, and insert the SIM card into the slot as shown in the picture below; then, place the battery into the battery jar and install the battery cover.



2.3. SIM card codes:

By setting PIN (personal identification number) code of the SIM card, you can protect your SIM card from illegal operation.

- If the PIN code is enabled, you need to enter the valid PIN code when you turn on the mobile phone.
- If you input wrong code for three times continuously, your SIM card will be locked and you need to input PUK code.

△Nota: *Your network service provider will set a standard PIN code (4-8 digits) for your SIM card. Please change it with your private password as soon as you get the phone.*

2.4 Connecting to network.

When the SIM card is decrypted, the mobile phone will search registered network or available local network automatically. Once connected, the logo of the network operator appears in the top of the screen, the mobile phone is in standby state, and you can make or answer calls.

Please contact your network operator if the SIM card has a failure.



2.5 Precautions of SIM card:

- · Put the SIM card out of children's reach.
- · Please use, insert and remove the SIM card carefully because the SIM card and its contacts are prone to be scratched or damaged by bending.
- · Do not expose the SIM card to electrostatic, dusty or moist environment.

2.6 Operation and installation methods of SD card.

SD card is a removable mobile memory card inside the mobile phone and used for extending the storage space of the mobile phone.

3. BATTERY AND CHARGING METHODS

1. Connect the charger to provided USB cable.
2. Connect the charger plug to the power outlet.
3. Connect the USB cable to the mobile phone; this icon  indicates the charging status.
4. The battery is fully charged when the status icon changes to ; please disconnect the charger.
5. Disconnect the charger from the mobile phone.

⚠Nota: *If the battery isn't used for a long time or the battery is used up, the mobile phone may be not turned on normally while charging. It is normal. Please charge for a while before turning on the mobile phone.*

 
The battery can be charged repeatedly; however, it is consumable product, please change a new battery if the standby duration reduces significantly.

The data service consumes more power and will reduce the standby duration.

The charging time changes according to temperature and battery usage.

The mobile phone will show prompt if the battery is too low. The mobile phone will power off automatically if battery level drops too low.

4. UNLOCKING MODE

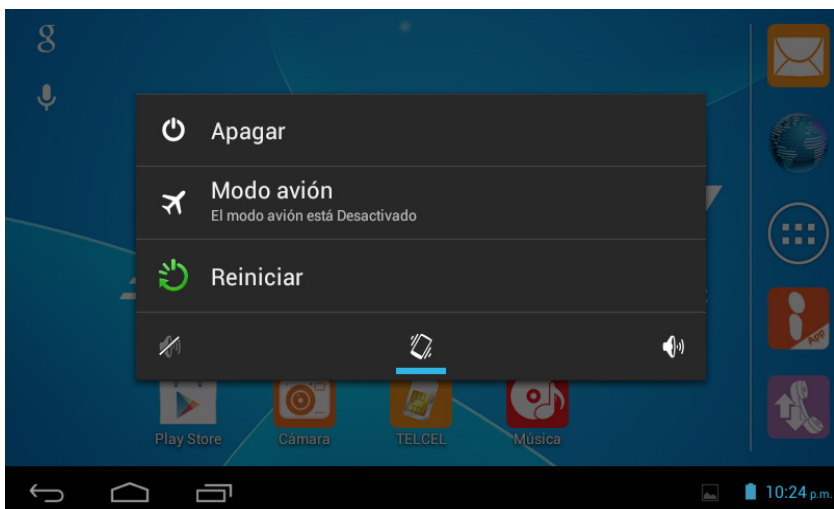


TABLET OPTIONS LIST

In standby state, you can press the Power key to lock and turn off the screen, and press it again to turn on the screen. Press and hold the Power key to open the tablet option list.

 
5.1 Unlocking interface.



In locked screen, tap the  icon in the bottom of the screen, slide to any direction unlock the screen, or drag the whole screen to right to access Camera and take pictures.



 
5.2 Main menu.

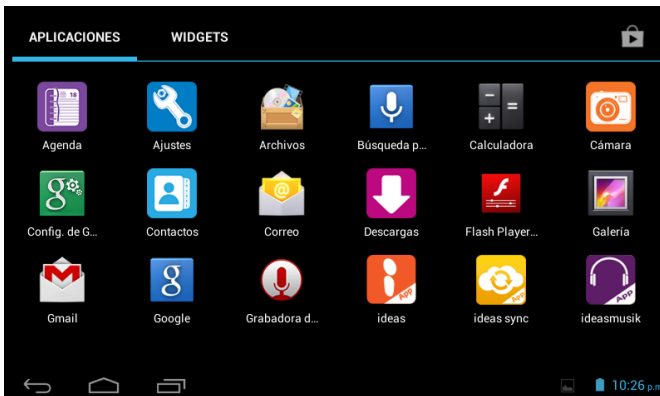


5.3 Main menu page.

Slide to left/right on the screen to switch the main menu page, and tap the Menu key to select Manage applications or Settings
 Drag and drop an icon to desktop to create a shortcut.

 5.4 View notifications

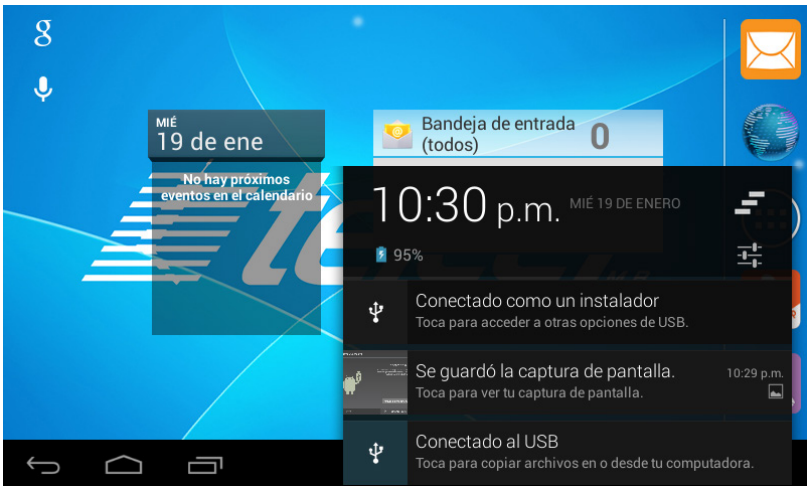

 5.5 Notifications interface of status bar

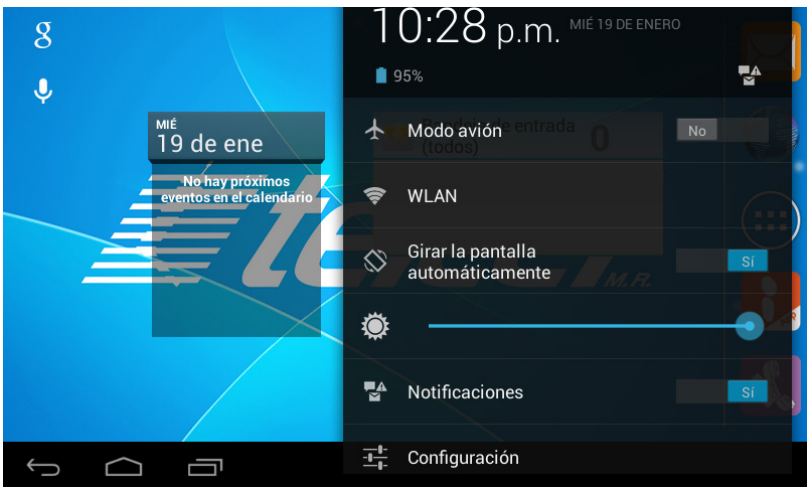


5.6 Quick settings interface of status bar

Pull down the status bar, you can view the notifications interface directly, in this interface, you can view notifications of the mobile phone, or pull up in bottom right corner of the screen to display quick settings interface, in this interface, you can turn on/off WLAN, Flight mode and customize profiles, etc.

5.7 Manage applications

In Manage applications interface, you can manage the running applications to improve the running speed of the mobile phone. You can view the information of downloaded applications, applications installed on SD card, running applications and all applications, restrict permissions or uninstall third party applications.

 
5.8 Contacts

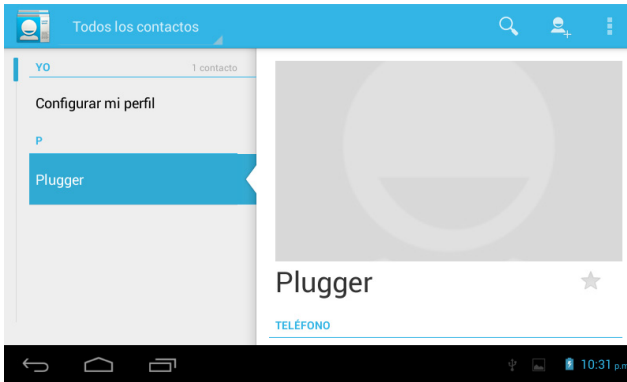

You can search contacts through phone number, email account or English name.

Press the Menu key to select Contacts to displayed, Import/Export, Accounts, Batch Delete, Send messages or Share visible contacts.

 
5.9 Smart dialing

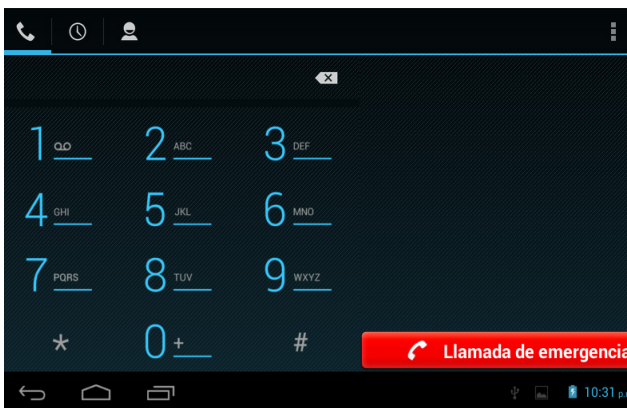

In dial plate interface, the mobile phone will fuzzy match with local contact info and show in the result while you are typing. In settings, you can set up call,

Quick responses and others.
During a call, you can access the dial plate or contacts through shortcuts.
After typing the number with keypad, press MENU and select Speed dial.
During the call, the backlight turns off when the phone is close to your ear for saving power and preventing misoperation

 
6. MESSAGING & BROWSER

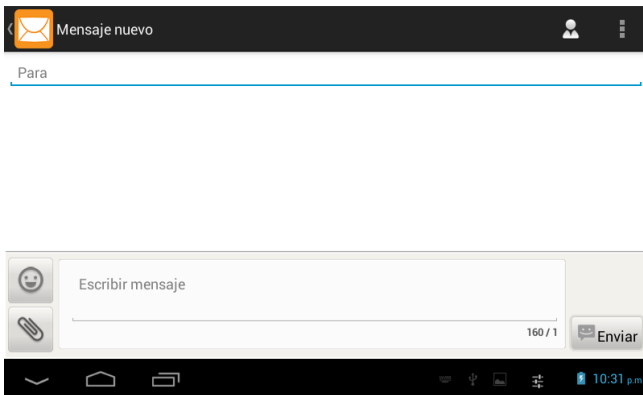

6.1 Messaging interface

Support pinyin, and third party input method software.
Tap Switch to switch among Chinese, English and stroke. If the language of spelling correction is set to English, tap the word in the input box while typing to get suggested results for choosing.

 
6.2 Browser

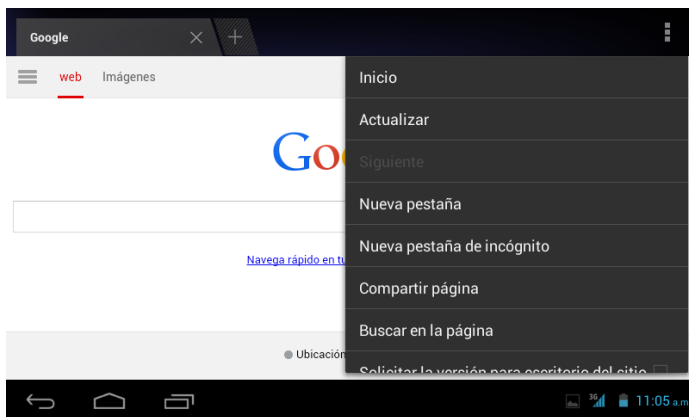

There default homepage interface will be show when you open the app first time,you can also change the default homepage to your favorite webpage site in the settings page. With this app,you can visit all of the internet webpages,download resource form the web server or watch video online.

7. MUSIC

 7.1 Music interface

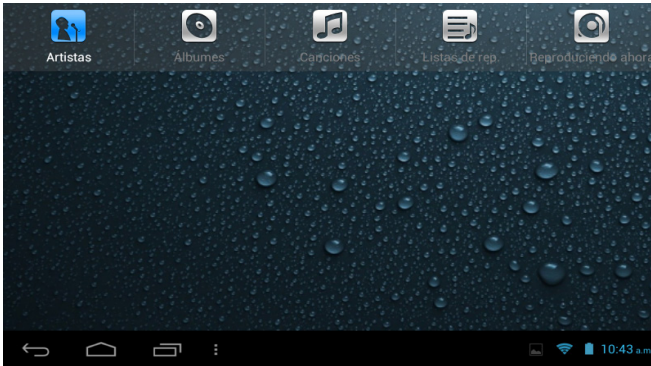

Support MP3, aac, ogg, midi and other formats; drag the progress bar while playing to move to any segment of the music, and tap Play button to pause or play.

Tap and hold artist, album or music name to perform operations such as play, add to playing list, send to ring tone, delete, and search; select search to search music and play

8. CAMERA

8.1 Camera function



**The maximum degree of resolution is achieved through software interpolation*

Tap on the screen to focus and follow the focus automatically, making the capture of moving object more convenient. You can set smile shutter, best capture, continuous shooting, common mode, automatic scene detection and other modes. The camera integrates various creative styles; you can tap to preview different effects.

8.2 Dual Camera

Support front camera; tap



to switch to front camera and take self photo shoot.

9. VIDEO RECORDER

Support video recording tap

 


to switch to video recorder.



10. SOUND RECORDER


You can record the sound, and send through MMS or Bluetooth directly, or set as ring tone.

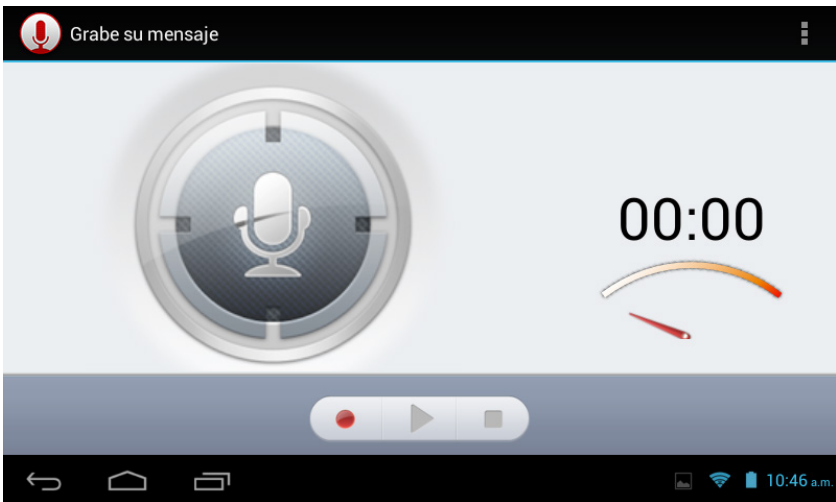

11. GALLERY


You can view the pictures and videos recorded by the camera in Gallery and or pictures and videos on SD card.

 In gallery, you can perform operations to multimedia files such as share, edit and set as wallpaper, or contact icon.

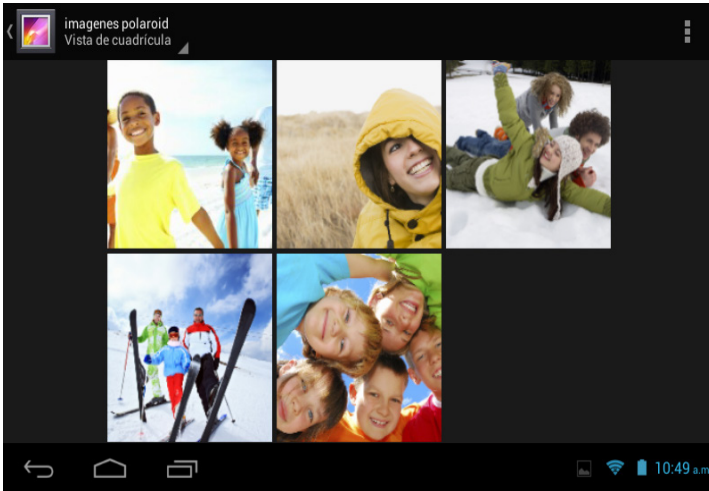


12. E-MAIL

 Support Gmail and E-mail; you can create an account and read e-mails at any time and anywhere with this function, you can merge the e-mails of different e-mail boxes to the same interface.

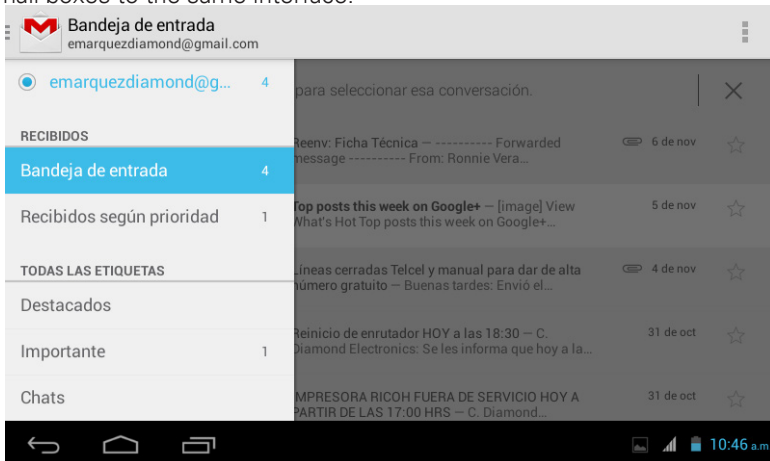

 13. FILE MANAGER

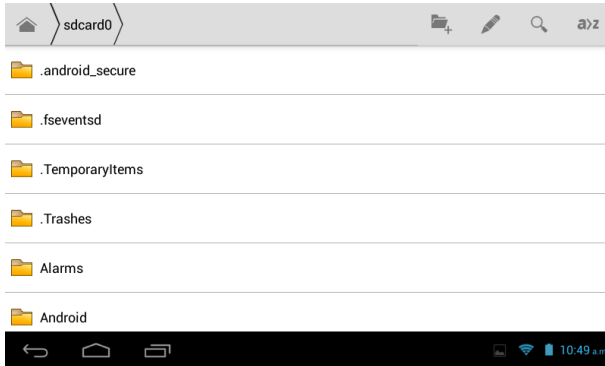

In File Manager interface, tap the Menu key to select New folder, Cut, and view the files stored on SD card directly.

Tap and hold a file or folder and select Copy, Cut, Delete, Rename and other options.

14. SOFTWARE STORE

 
This mobile phone is designed with built-in “play store”, which provides popular software and other sources; you can find wanted software through search or rank list. Experience the desktop shortcut of play store, get the recommended info quickly, and experience free download through WIFI or web client.

15. SETTINGS



15.1 Security function

You can set up screen security, encryption, SIM lock, etc.

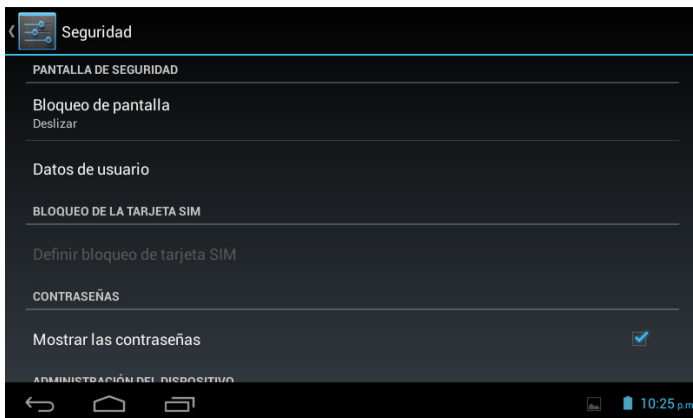

15.2 Backup and reset

In this interface: you can back up the application data, WLAN password and other settings to Google server and reset all data stored on the mobile phone.



16. DROP-UP MENU BAR

Drop up USB connection in menu bar; as the mobile phone can be set as flash drive, the files on SD card can be copied to PC or from PC to mobile phone.

Electromagnetic Radiation Specific Absorption Rate (SAR)

The maximum value of the electromagnetic radiation specific absorption rate (SAR) is 0.687W/kg, which is in compliance with GB 21288-2007 requirements.


17. TROUBLESHOOTING

Please refer to the following list of problems and solutions if there is any abnormality when you use the tablet. Please contact the distributor or service provider if it still doesn't work.

Por favor contacte a su proveedor de telefonía si el problema persiste.

PROBLEM	REASON	SOLUTION
Can't access Internet normally when using browser	The network operator doesn't provide this service or you hasn't applied this service The setting is not correct	Please contact and consult your network operator for information of how to apply and use this service Please refer to specific introductions of the browser
SIM card error	SIM card is damaged The SIM card isn't installed properly. The metal surface of the SIM card is dirty	Please contact your network operator Check the SIM card Clean it with clean cloth
Poor receiving	Está usando su tablet en un área con recepción pobre, por ejemplo, cerca de un edificio alto o en un sótano, las ondas de radio no pueden atravesar estas estructuras. La tablet se esta usando cuando las líneas están congestionadas.	Por favor realice o atienda llamadas en lugares con buena recepción. Evite usar su tablet cuando las líneas estén congestionadas
Can't switch on	Battery is too low	Charge the battery
Can't make a call	Call barring is active	Cancel call barring
Can't connect to network	SIM card is invalid Beyond service area Weak signal	Please contact your network operator Move to service area of your network operator Move to a place with strong signal and try again
Can't charge	The voltage is not within rated range of the charger Nonstandard charger is used. Poor contact	Use an allowed voltage within the rated range of the charger Use a charger specially designed for the mobile phone Check whether the plug is connected properly

17.1 Toxic and Hazardous Substances Declaration

Part Name	Toxic and hazardous substances or elements					
	Lead (pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr+6)	Poly brominated biphenyl (PBB)	Poly brominated diphenyl ether (PBDE)
Master unit	o	o	o	o	o	o
Battery	x	o	o	o	o	o
Charger	x	o	x	o	x	x
Accessoriis	o	o	o	o	o	o
<p>o: Indicates that this toxic or hazardous substance contained in all the homogeneous materials for this part is below the limit requirement in SJ/T11363-2006.</p> <p>x: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006.</p>						
<p> The environmental use period of the product is 20 years. The symbol is shown in the left. Certain changeable parts may have a different environmental use period (e.g. battery unit module) pasted on the product. This environmental use period only applies to the products operated under the condition regulated in the Manual.</p>						

Disclaimer

The colors and displayed / specifications mentioned in this manual may differ from original product. The images included here have presentation purposes only. Other products logos, trademarks and names mentioned are the property of their manufacturers.

The contents of this manual may differ from the final product.

The manufacturer reserves the right to make changes or updates to this user guide without notice.



 **Polaroid**



Warranty

Descripción: _____
 Modelo: _____
 No. de serie: _____
 Nombre del cliente: _____
 Domicilio: _____
 Ciudad: _____
 Estado: _____
 Fecha de compra: _____

Sello de la Tienda

Call Center: 01 800 000 4949

Horario de atención telefónica (Hora central de México)

Lunes a Viernes: 9:30 a 18:30 h

Sábado: 10:30 a 14:30 h

Los consumidores pueden obtener las partes, componentes, consumibles y accesorios en:

Taller de Comercializadora Milenio:

Blvd. Juan Alessio No. 7510

Parque Industrial Pacífico

C.P. 22670 Tijuana B.C. Mex.

Contacto

Correo: servicio1@diamond-electronics.com Sitio: www.diamond-electronics.com

Responsable de la Garantía

COMERCIALIZADORA MILENIO, S.A. DE C.V.

Calle Juan Salvador Agraz No. 65 oficina 22 A y B,

Col. Santa Fe Cuajimalpa, Del. Cuajimalpa de Morelos,

México, D.F. C.P. 05300

El aparato que usted ha recibido cuenta con una garantía de 1 año en la totalidad de las piezas; componentes del producto y mano de obra de la reparación a partir de la fecha de compra, así como gastos de transportación respectivos únicamente para el caso de que no haya un centro de servicio autorizado en su localidad.

La presente garantía será válida bajo las siguientes condiciones:

1. Para hacer efectiva la garantía, bastará presentar el producto junto con esta póliza debidamente sellada o en su defecto, el comprobante de compra en nuestro taller de servicio.
2. Comercializadora Milenio S.A. de C.V. se compromete a realizar una revisión de servicio y en su caso reparar o cambiar el artículo, si la falla es atribuible a defecto de fabricación.
3. El tiempo de reparación será máximo en 30 días a partir de la recepción del producto.

Esta garantía será nula en los siguientes casos:

- Cuando el producto se hubiese utilizado en condiciones distintas a las normales.
- Cuando el producto no hubiese sido operado de acuerdo al instructivo de uso que le acompaña.
- Cuando el producto hubiese sido alterado o reparado por personas no autorizadas por el fabricante nacional, importador o comercializador responsable respectivo.

